


Ultra-low noise polarization diversity coherent reception module 300M

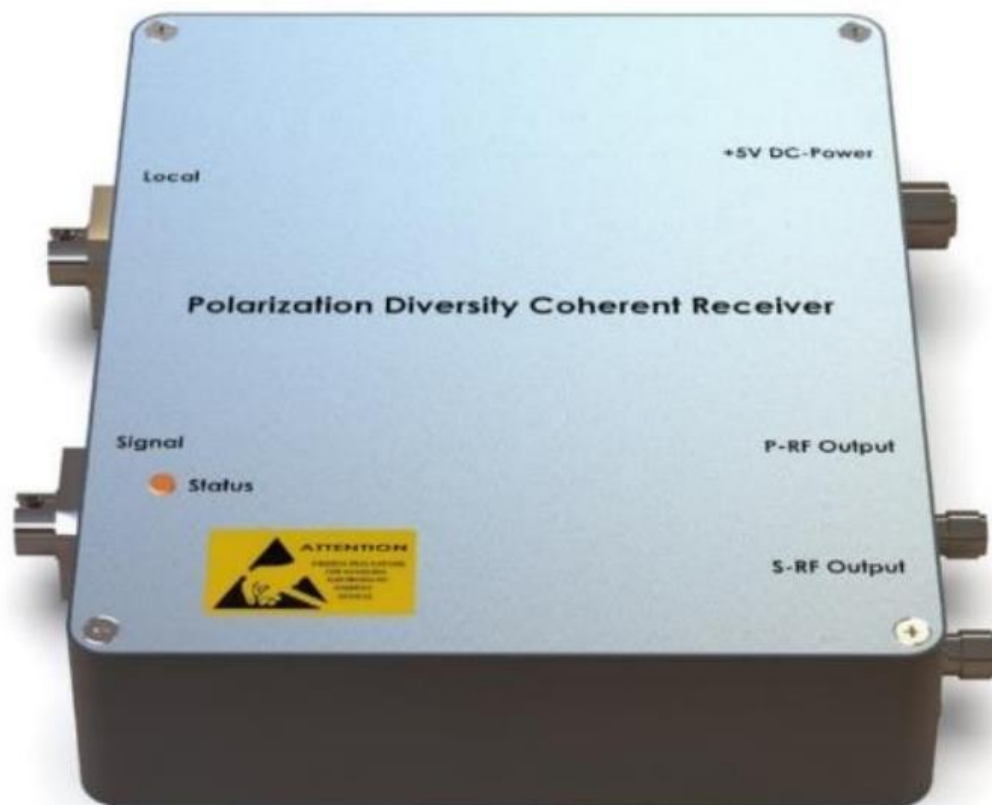

● Product Description

The ultra-low noise polarization diversity receiver module is designed for

polarization-sensitive fiber optic sensing applications. This module coherently processes the two polarization states of the local oscillator and signal light separately, using two high-speed, low-noise balanced detectors for independent reception. It effectively solves the issue of coherent polarization states. This series is an upgrade of the original PDR series, significantly reducing the background noise, thereby providing higher signal-to-noise ratio for signal detection.

- **Product features**

High Bandwidth、 High Gain、 Ultra-low noise、 Built-in low-noise isolation power supply

- **Part Number**

MP-UPR-M-I-300-F-D/A

- **Application area**

Fiber optic sensing、 Laser wind radar、 Optical coherence tomography、 Spectroscopy

● Core parameters

Wavelength	Bandwidth	Responsivity
1510~1590nm	300MHz	0.95A/W@1550nm


● General Parameters

Wavelength	1510~1590 (1300±50nm; 1060±50nm Optional)												nm
Bandwidth	100M	200M	300M	400M	500M	800M	1G	1.2G	1.5G	2G	2.5G		Hz
Detector Responsivity	0.95	0.95	0.95	0.95	0.95	0.95	0.95	0.95	0.95	0.95	0.95	0.95	A/W@1550nm
Transimpedance Gain	30K	30K	30K	20K	10K	30K	30K	30K	30K	30K	30K	30K	V/A
Input Light	Local	<5	<5	<5	<5	<5	<5	<5	<5	<5	<5	<5	mW
	Signal	300	300	300	300	300	300	300	300	300	300	300	μW


Polarization Extinction Ratio	22	22	22	22	22	22	22	22	22	22	22	dB
NEP	2.5	2.5	2.5	2.9	3.1	3.1	3.1	3.1	3.1	3.1	3.1	pW/Sqrt(Hz)
Power Supply Voltage	5	5	5	12	12	12	12	12	12	12	12	V
Power Supply Current	0.5(max)	0.5(max)	0.5(max)	0.5(max)	0.5(max)	0.5(max)	0.5(max)	0.5(max)	0.5(max)	0.5(max)	0.5(max)	A
Coupling Method	DC/ACC	DC/ACC	DC/ACC	DC/ACC	DC	AC	AC	AC	AC	AC	AC	
Interface Type	Electrical interface: SMA; Fiber connector: FC/APC											
Fiber Type	Local:PM; Signal:SM											

RF Output	SMA
Dimensions	120*100*25mm


Test Result

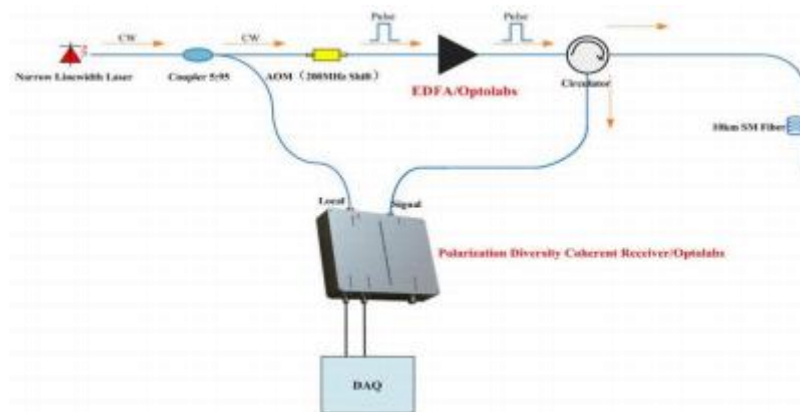

Polarization Diversity Coherent Reception Optical Circuit Diagram

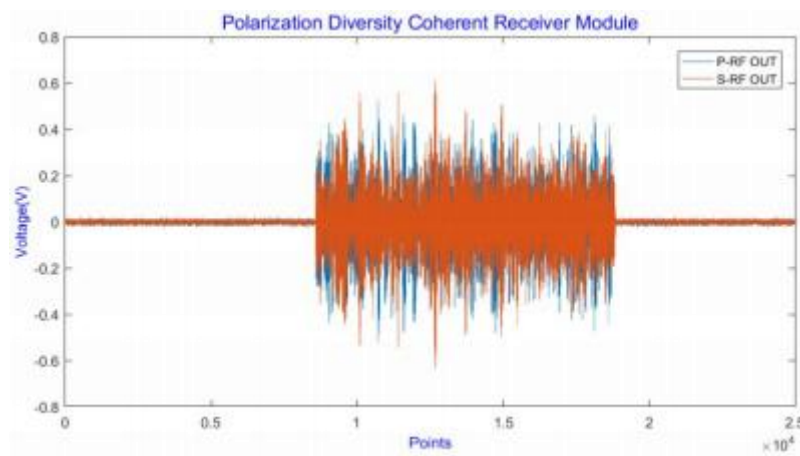

Coherent signals of P-polarized and S-polarized states.

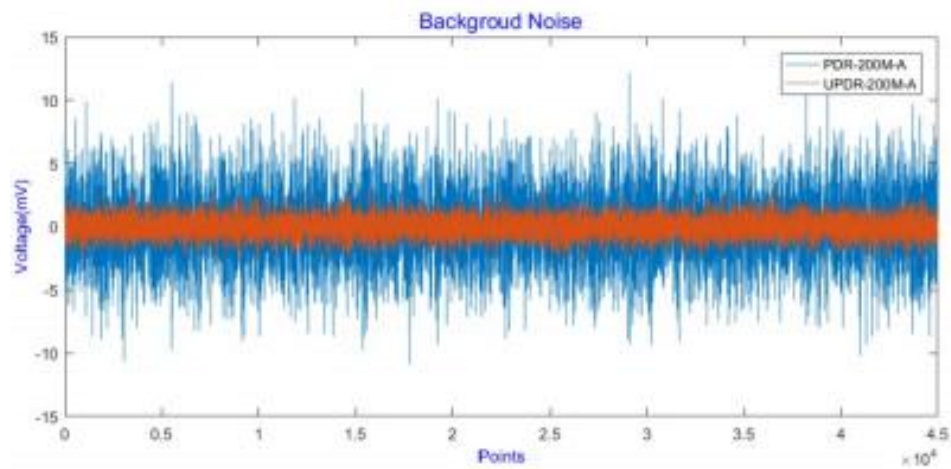

**Comparison of the base noise between ultra-low noise polarization diversity
and conventional polarization diversity**