

## 950-1650nm InGaAs Detector with Dual TEC, Photodiode $\Phi 1000\mu\text{m}$



### ● Product Description

Unit InGaAs detector consists mainly of a P-I-N structure InGaAs photosensitive chip, transition electrode plate, temperature sensor, and a dual-stage thermoelectric cooler (TEC), all housed in a TO package. This user manual specifically covers this series of products.

## ● Product features

Secondary TEC cooling; InGaAs material; High sensitivity; Low dark current;

Excellent stability

## ● Part Number

MPD-CPD-B-I-9V1-2

## ● Application area

Single photon detection | LiDAR | Spectral analysis | Quantum  
communication | Scientific research experiments

## ● Core parameters

Working Wavelength	Active Area	Package
950-1650nm	1000um	TO

## ● General Parameters

Main Parameters of the Detector

Structural Parameters

PN#	Package	Cooling Type	Active Area ( $\mu\text{m}$ )	Chip Size ( $\mu\text{m}$ )	Electrode Size ( $\mu\text{m}$ )
MPD-CPD-B-I-9V0.3-2	TO Package	Dual-stage Cooling	$\Phi 300$	$850 \times 850$	$140 \times 180$
MPD-CPD-B-I-9V0.5-2			$\Phi 500$	$1000 \times 1000$	$140 \times 180$
MPD-CPD-B-I-9V1-2			$\Phi 1000$	$1410 \times 1410$	$140 \times 180$
MPD-CPD-B-I-9V2-2			$\Phi 2000$	$2560 \times 2560$	$280 \times 360$
MPD-CPD-B-I-9V3-2			$\Phi 3000$	$3560 \times 3560$	$320 \times 480$

### Optoelectrical Parameters

PN#	Test Temperature $T_{\text{ch}}$ ( $^{\circ}\text{C}$ )	Spectral Response Range $\lambda$ ( $\mu\text{m}$ )	Dark Current $I_{\text{D}}$ (nA)		Junction Capacitance C ( $f=1\text{MHz}$ , $V_{\text{R}}=0\text{V}$ ) (pF)
			$V_{\text{R}}=1\text{V}$	$V_{\text{R}}=5\text{V}$	
MPD-CPD-B-I-9V0.3-2	25	$0.95_{\pm 0.05}$ to $1.65_{\pm 0.05}$	0.1	0.5	50
MPD-CPD-B-I-9V0.5-2			0.25	1	100
MPD-CPD-B-I-9V1-2			1	4	300
MPD-CPD-B-I-9V2-2		Peak Value $\lambda_{\text{P}}=1.55$	4	10	800
MPD-CPD-B-I-9V3-2			10	40	2000


PN#	Peak Responsivity $S$ (A/W)	Shunt Resistance $R_{sh}$ ( $V_R=10mV$ ) (M $\Omega$ )	Peak Detectivity $D^*$ ( $cm \cdot Hz^{(1/2)}/W$ )	Noise Equivalent Power NEP ( $W/Hz^{(1/2)}$ )
MPD-CPD-B-I-9V0.3-2	1.0	3500	$3 \times 10^{12}$	$8.9 \times 10^{-15}$
MPD-CPD-B-I-9V0.5-2		1000		$1.5 \times 10^{-14}$
MPD-CPD-B-I-9V1-2		300		$3.0 \times 10^{-14}$
MPD-CPD-B-I-9V2-2		80		$5.9 \times 10^{-14}$
MPD-CPD-B-I-9V3-2		40		$8.9 \times 10^{-14}$

### Mechanical Structure and Electrical Interface


The detector has dimensions of  $\phi 15.3mm \times 10mm$  (excluding the pins). The bottom surface of the shell has 8 pins with a diameter of 0.45mm and a pin length of 13.5mm, which are used for TEC power supply, temperature sensor signal reading, and detector signal output. The design distance from the light-sensitive surface to the bottom of the window is 2.3mm, and the design distance from the mounting surface (i.e., the bottom of the shell) is 6.2mm. The window material is sapphire, with a thickness of 0.5mm, and the transparent area has a design diameter of  $\phi 9mm$ . The center of the light-sensitive surface is

located at the center of the detector, with a positional offset of less than 0.3mm.

The mechanical interface appearance and dimensions, as well as the optical and electrical interfaces, are shown in the figure.

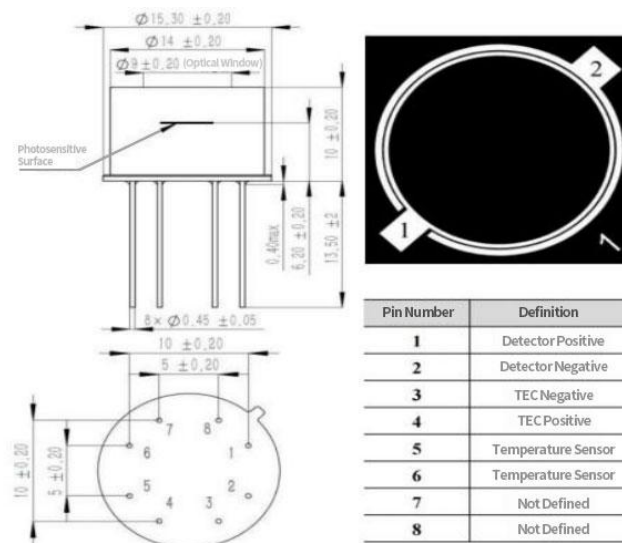

### Response Spectrum (Typical Value)

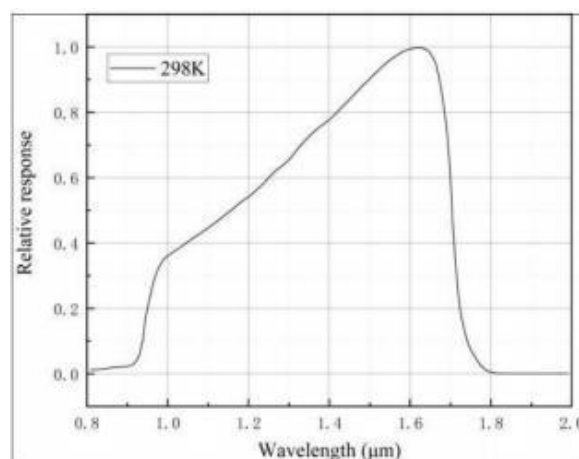

## Thermal Parameters

### Operating Environment

Parameter	Typical Value
Operating Temperature(°C)	-45~+55
Storage Temperature(°C)	-50~+60

### Thermoelectric Cooler (TEC) Characteristics

The detector integrates a two-stage thermoelectric cooler (TEC), with the center of the heat dissipation surface coinciding with the center of the detector's bottom surface. The heat dissipation area should be  $\geq 6\text{mm} \times 6\text{mm}$ . The performance parameters are as follows:

Performance Specifications	Value
Max. Thermal Load Power ( $Q_{\text{max}}$ /W)	0.93W
Max. Allowed Load Current ( $I_{\text{TEC-max}}$ /A)	1A
Max. Allowed Load Voltage ( $V_{\text{TEC-max}}$ /V)	2V

### Temperature Monitoring Module Characteristics

The detector uses a thermistor as the temperature monitoring module. The resistance values corresponding to different temperatures within the operating range are shown in the table below:

Temperature ( °C )	Resistance ( kΩ )	Temperature ( °C )	Resistance ( kΩ )
-65	94.270	-15	6.909
-60	69.290	-10	5.587
-55	51.500	-5	4.549
-50	38.700	0	3.729
-45	29.400	5	3.075
-40	22.560	10	2.55
-35	17.490	15	2.126
-30	13.690	20	1.782
-25	10.810	25	1.5
-20	8.608	30	1.268

### Thermistor Resistance-Temperature Relationship Formula

$$\frac{1}{(T1 + 273.15)} = \frac{\ln\left(\frac{R1}{R2}\right)}{B} + \frac{1}{(T2 + 273.15)}$$

**T1:** Test target temperature, unit: °C;

**T2:** Reference point temperature, unit: °C. The typical reference temperatures within the range of -2070°C are 10°C or 40°C. Choose a reference temperature close to the target temperature;

**R1:** Thermistor resistance corresponding to T1, unit: kΩ;

**R2:** Thermistor resistance corresponding to T2, unit: kΩ;

**B:** The typical B10/40 value within -2070°C is 3019.6±60.

**Notes:**

- a) During the installation of the TEC, attention must be paid to the additional resistance introduced by external electrical structures. If the added resistance exceeds 10% of the TEC resistance, the I-V curve needs to be recalibrated.
- b) It is recommended to connect the TEC using a low-resistance method. If soldering is required, short-circuit grounding protection should be applied. The soldering temperature should be  $\leq 250^{\circ}\text{C}$ , and the soldering time should be  $< 10\text{s}$ .
- c) If higher measurement accuracy is required within a small temperature range, the B value can be calculated according to specific requirements.
- d) Before turning on the TEC, ensure that the temperature monitoring module is functioning correctly, that the cooling surface has sufficient contact with the heatsink, and that the cooling surface area meets the required size. The heatsink should also be operational. The TEC should not be turned on without an installed or functioning heatsink.
- e) When turning on the TEC for the first time, start with 0A or 0V, gradually increase the current or voltage while monitoring the temperature changes until the preset temperature is reached.
- f) Since the performance of the detector is temperature-dependent, the TEC should be turned on to stabilize the temperature before the detector is turned on. It is not recommended to operate the detector in an environment with



fluctuating temperatures.

g) When the detector is not operating, the TEC should be powered off to extend its service life.

h) The cooling effect of the detector is influenced by the ambient temperature, power supply performance, and cooling system status. It is recommended to design the cooling system appropriately based on the user's environment and performance requirements.